



Instructions for electrician STEPS 2 - 18

WARNING:

2

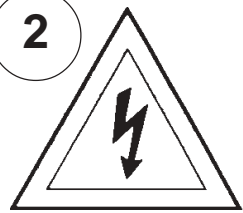


Electrical Danger

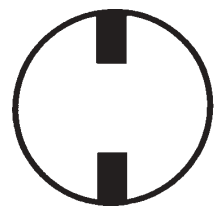

Turn Power Off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

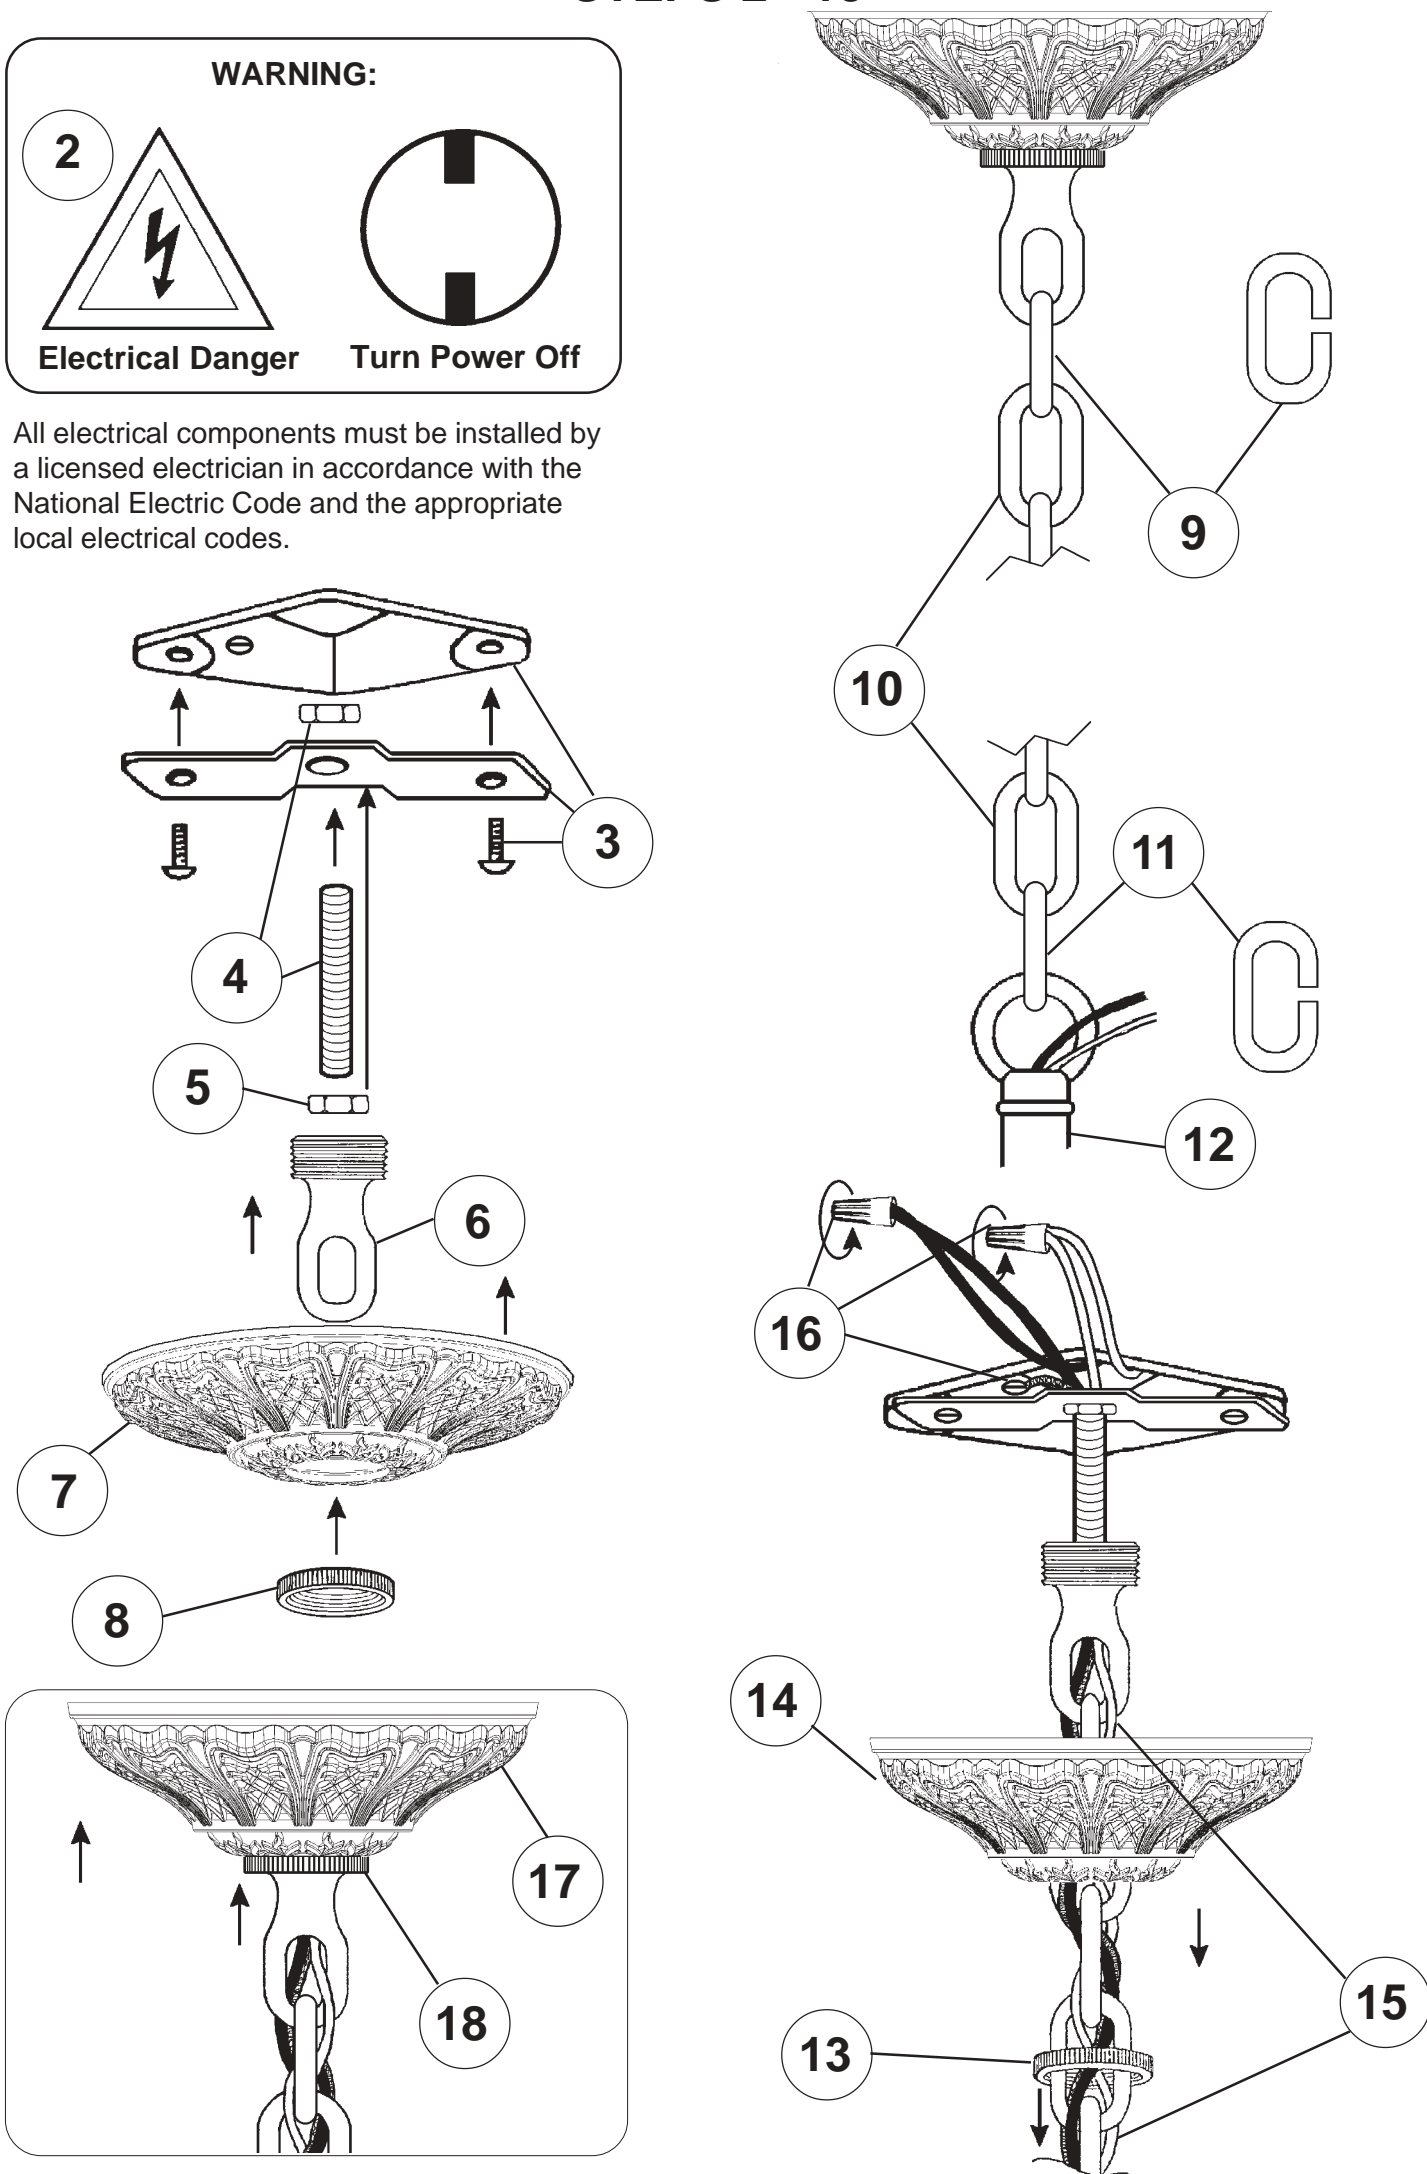

CHANDELIER 6949- _____ TRIM DIAGRAM

(Finish Option) (Trim Option)



THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADEMARK OF
SCHONBEK WORLDWIDE LIGHTING INC.

9 Lights
Diameter: 28"
Body Length: 30"
Hanging Weight: 25-1/2 lbs.

SCHONBEK®

See diagram on back page
Follow steps in exact order
Save this trim diagram for future reference


1

IMPORTANT

Person who opens carton should record the
following information for future service.

CODE # _____ Four-digit number on outside of carton.
PACKER # _____ See crystal package label.
ORDER # _____ See crystal package label.

Instructions for crystal trimming
STEPS 19 - 30




You will need 9 - C10
25 Watts Recommended
60 Watts Max

19

Install bulbs and be
sure to test fixture
BEFORE trimming.

DIAGRAM #1

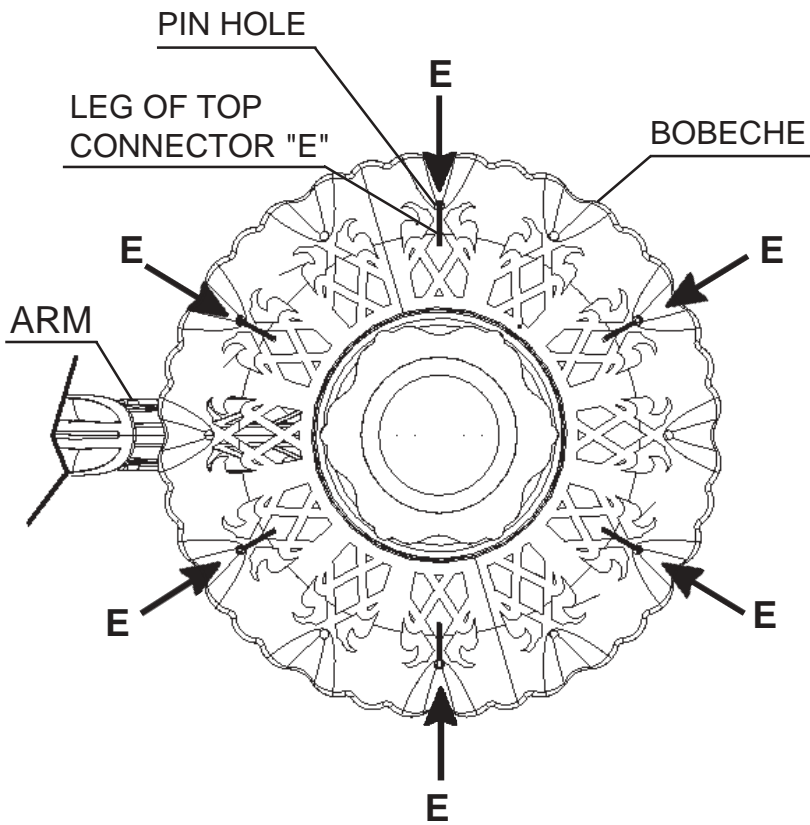

When trimming bobeche with letter "E", insert leg of
top connector into pin hole from under bobeche.
Hang in every other pin hole starting on either side of
the arm (refer to Diagram #1)

