



CHANDELIER 7866- ___ S TRIM DIAGRAM

(Finish Option)

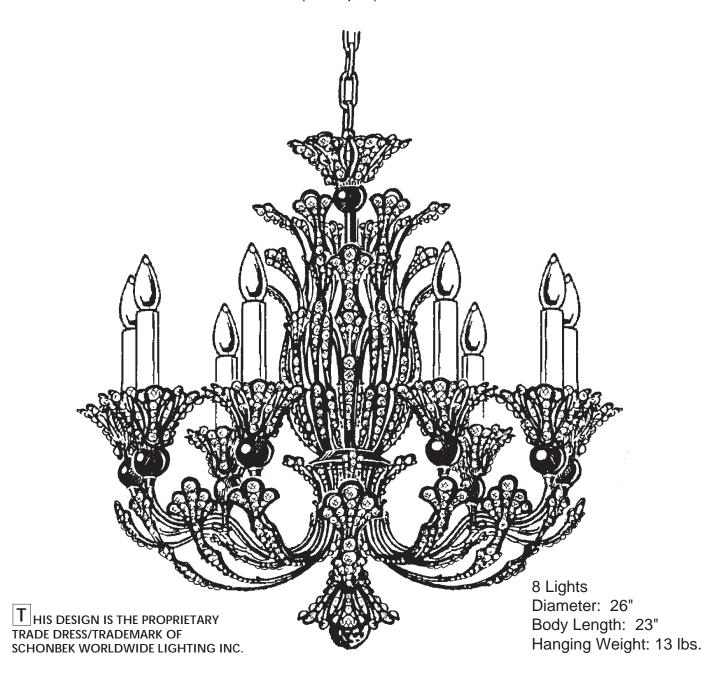

SCHONBEK®

See diagram on back page Follow steps in exact order Save this trim diagram for future reference

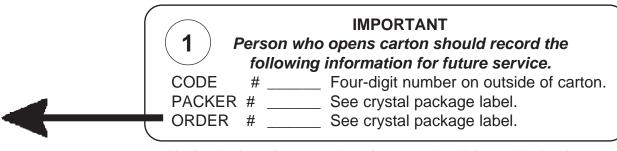

SCHONBEK IS A WORLD LEADER IN CHANDELIER DESIGN. PATENTS INCLUDE: #D397,494,#D397,495 & #D435,686

Instructions for crystal trimming **STEPS 22 - 24** 22 #7863358 You will need 8 - C10 25 Watts Recommended 60 Watts Max #7863353 #7863354 #7863358 #7863352 #7863350 #7863351 #7863359 24 **23**] **N233** Tighten With **Allen Wrench** Provided.

