


## SCHONBEK®


## **ARLINGTON 1305H**

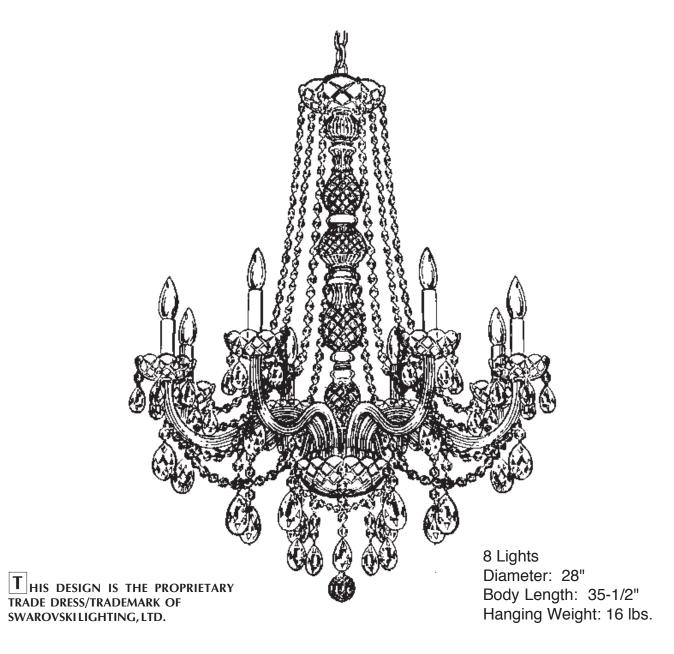


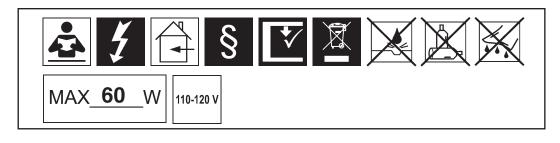


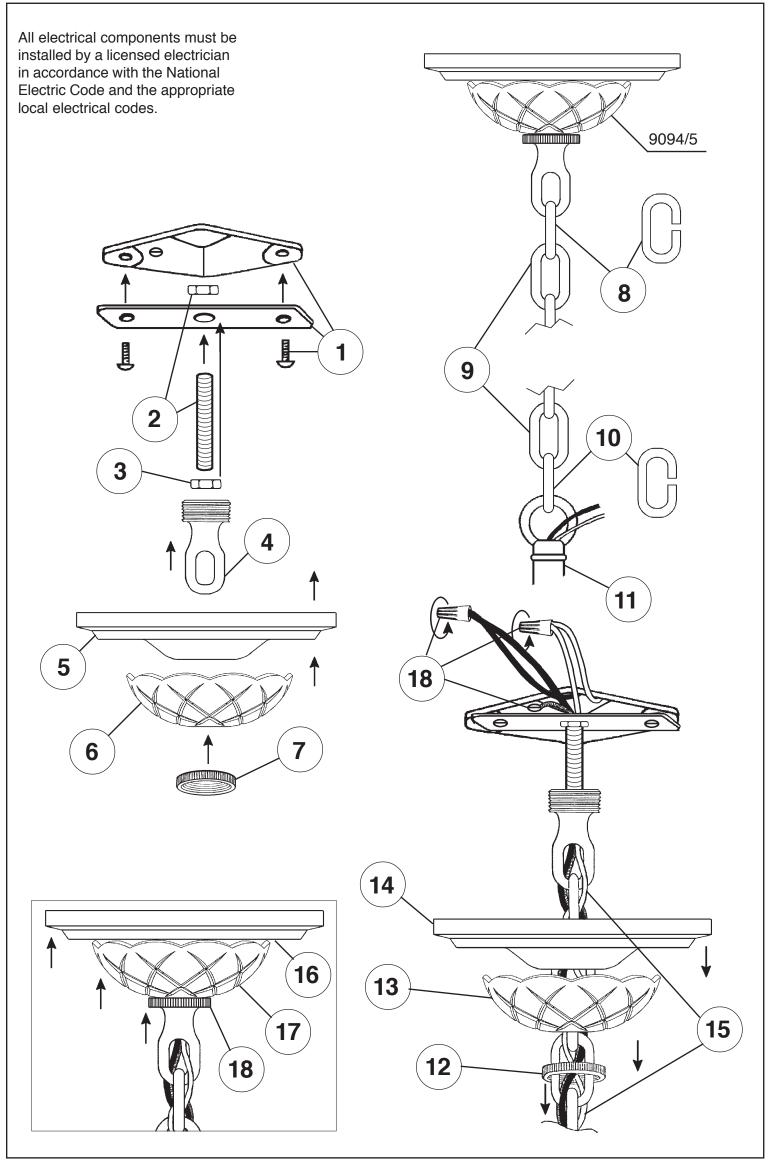




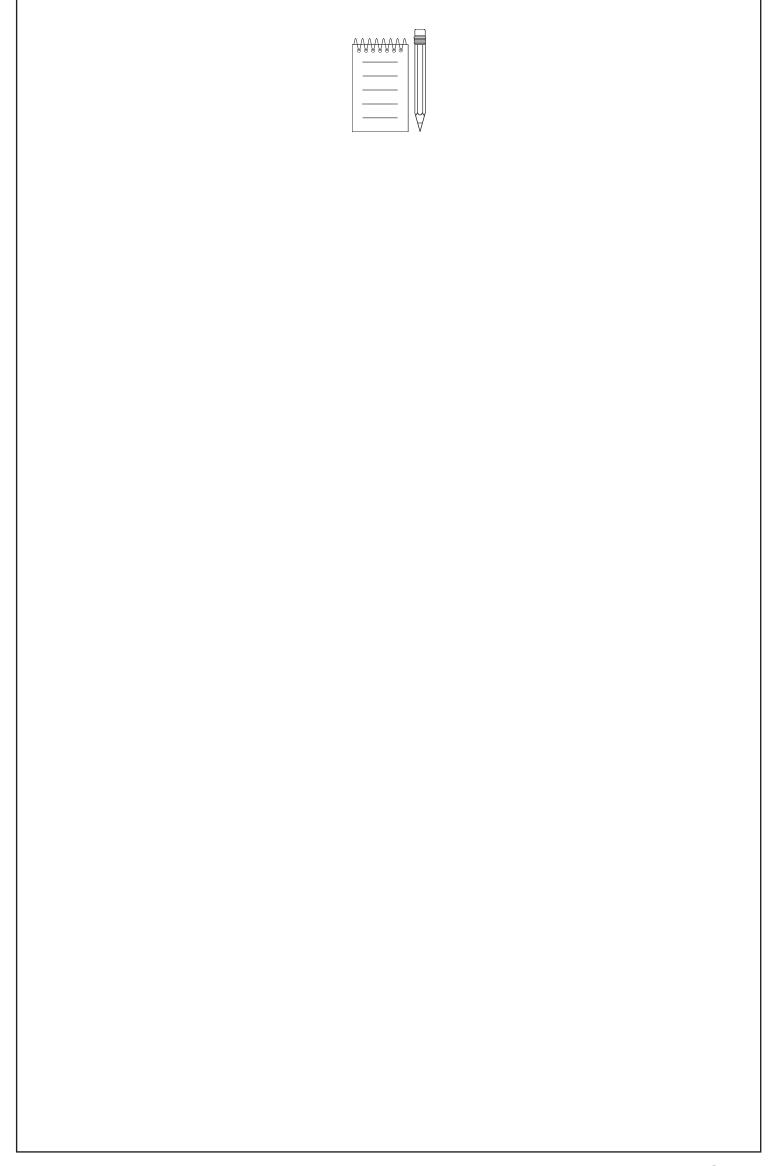

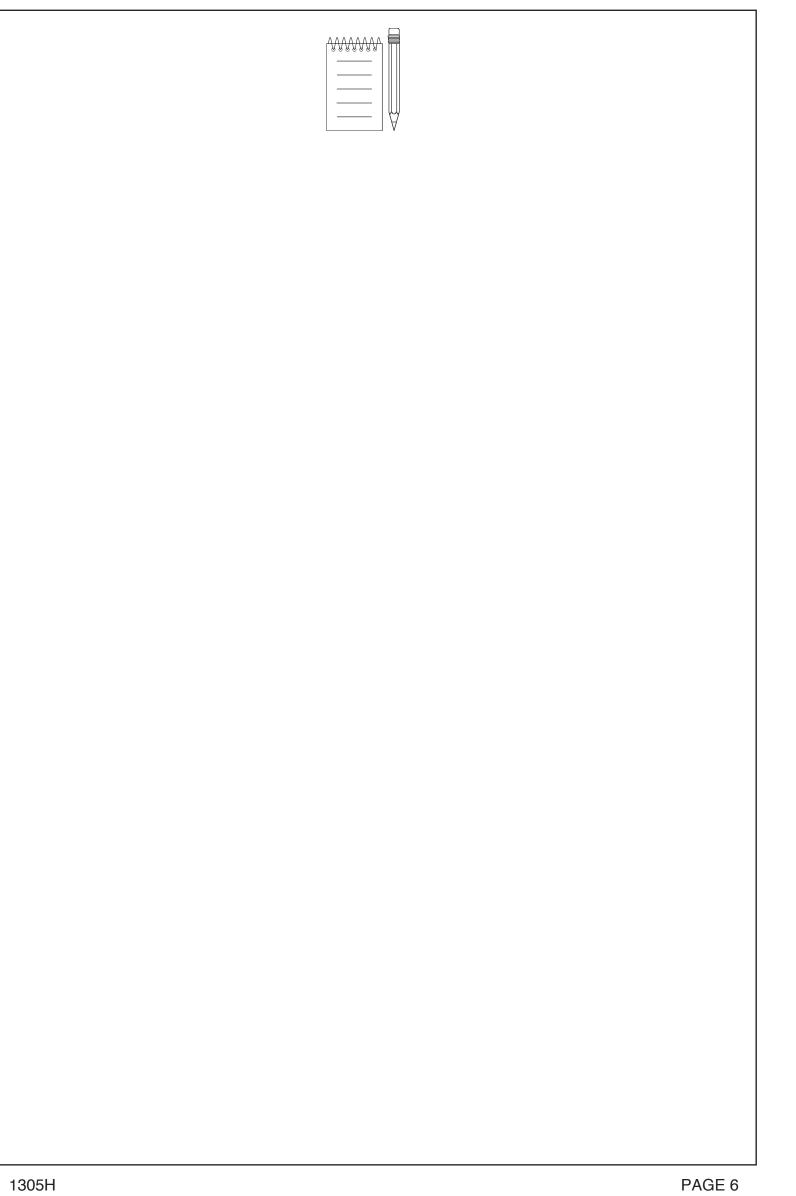

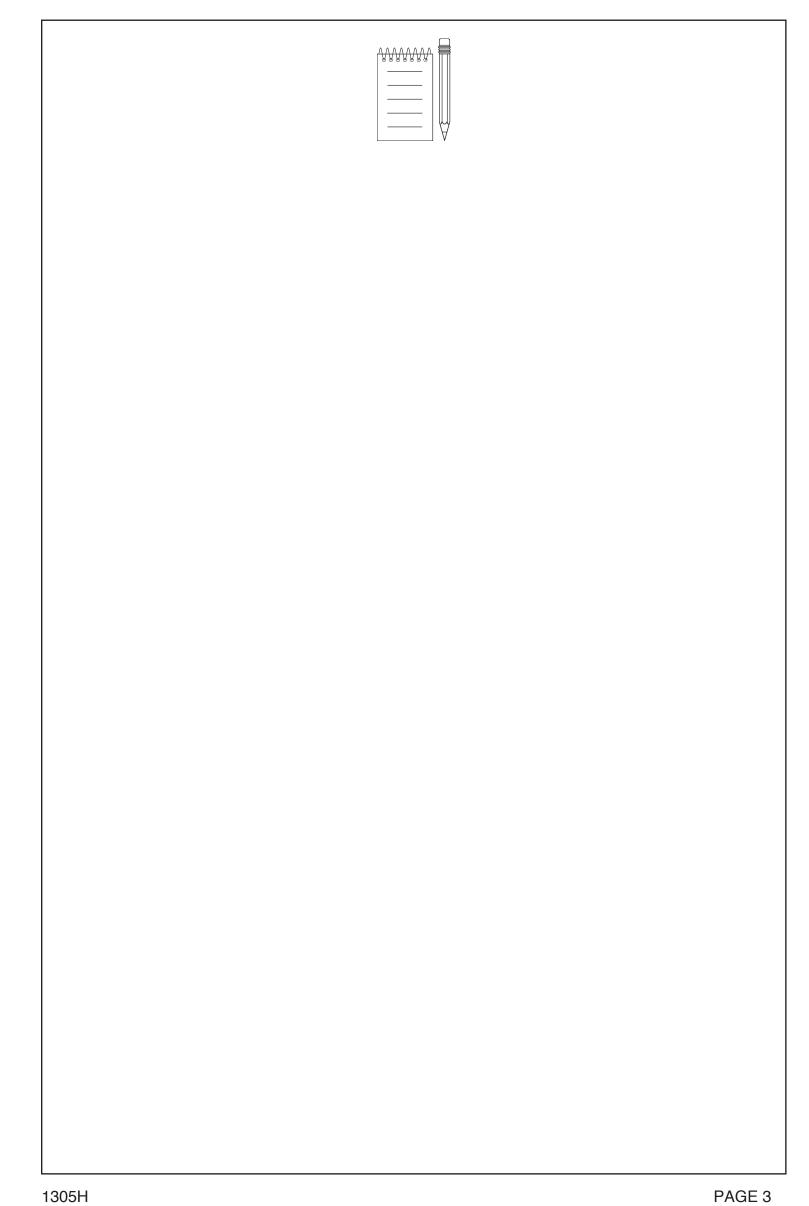

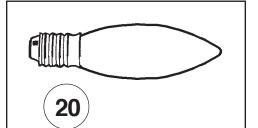

You will need 8 - B10 25 Watts Recommended 60 Watts Max

Install bulbs and be sure to test fixture BEFORE trimming.

Install arms into washer. Line up holes in arms with dimple in washer. Use nut to secure arms in place.

This end goes up

against washer.

Connect ground wire in each arm (silver wire) to ground wire in center column. NO MORE THAN 5-WIRES PER WIRE NUT. Use electrical tape to secure wire nuts.

Connect white arm wires to neutral column wire (ribbed or marked is neutral).

Connect black arm wires to the power wire in column.

Carefully press wires as close as possible to the underside of washer.

Attach metal enclosure with nut provided. Slide spacer and glass dish up over stem pipe and attach with rosette, round nut and half ball. Install bobeches.

