
SCHONBEK®

BAGATELLE 1242- _____




THIS DESIGN IS THE PROPRIETARY TRADEDRESS/TRADEMARKOF SWAROVSKI LIGHTING, LTD.



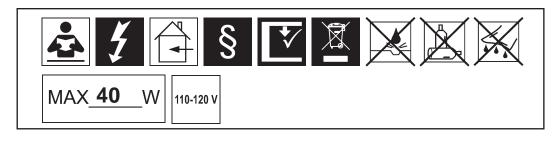

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

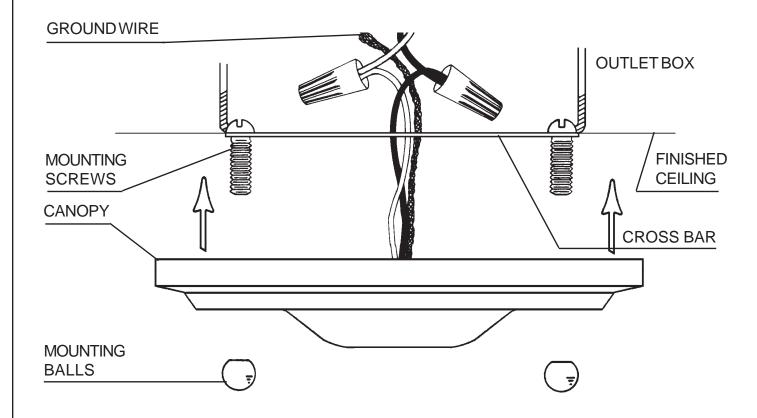



1 Attach cross bar to outlet box.

2 Again, make sure that power to the outlet box is disconneced. Feed stem wires through cross bar and attach to power wires in outlet box. Fixture MUST be properly grounded.

3 Attach canopy to ceiling with mounting balls, thereby retaining complete fixture against ceiling.


4 Screw bulb into socket. Test power to insure proper wiring before hanging trim from fixture.

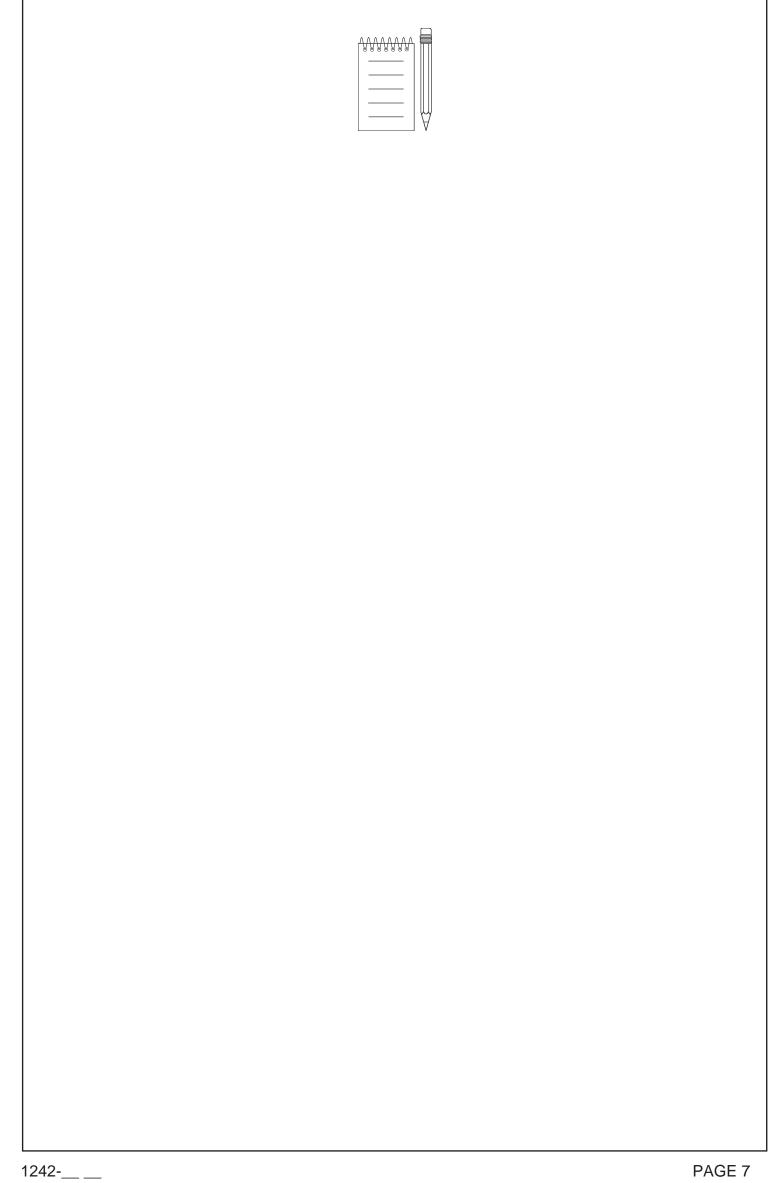

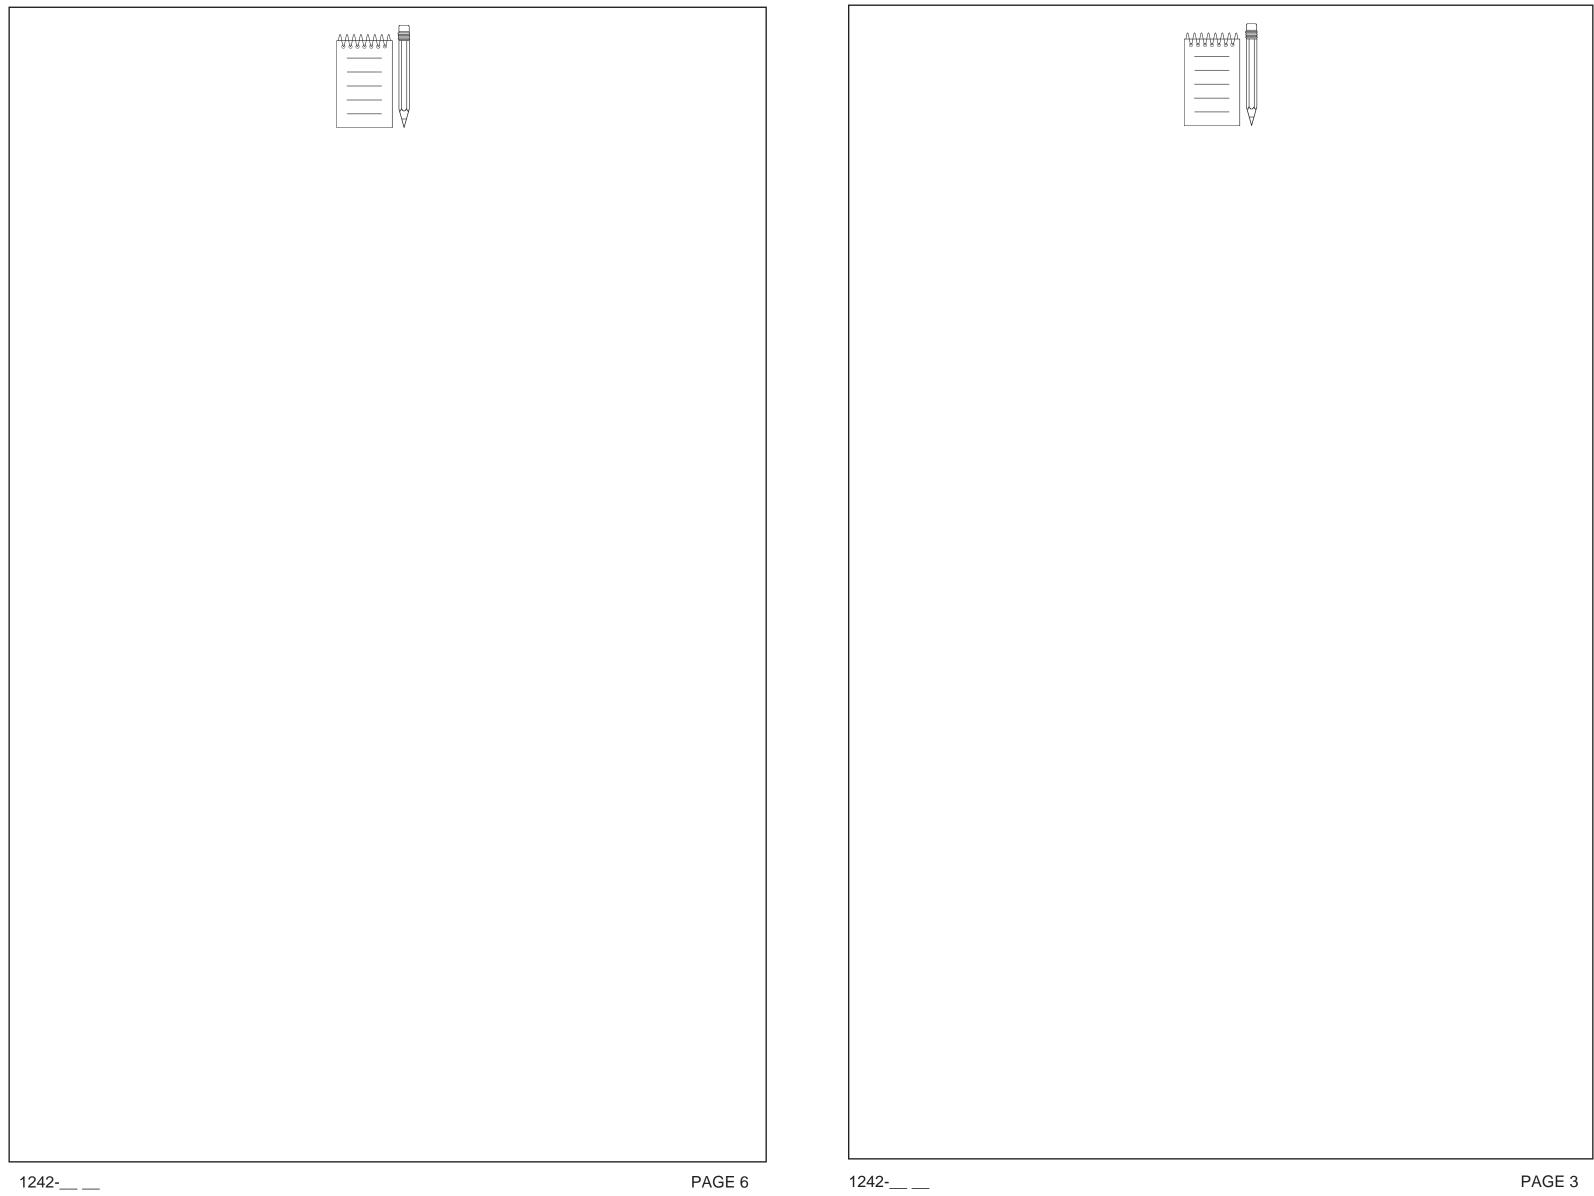

1242-___

PAGE 6

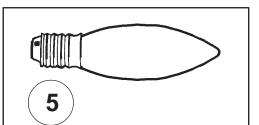

You will need 3 - B10 25 Watts Recommended 40 Watts Max MIN 75°C SUPPLY CONDUCTORS

Install bulbs and be sure to test fixture BEFORE trimming.

